Dell[™] Inspiron[™] 1100, 5100, and 5150 Service Manual

Before You Begin

System Components

Memory, CD or DVD Drive, Modem, and Mini PCI Card

Hard Drive

Keyboard

Display

EMI Shield, Video Card, and Palm Rest

Microprocessor Thermal-Cooling Assembly

<u>Microprocessor Module</u>

Speakers

 
System Board

 
Flashing the BIOS

Base Plastics

Pinout Assignments for I/O Connectors

Notes, Notices, and Cautions







Model PP07L and PP08L

June 2003 Rev. A01

Information in this document is subject to change without notice.

Back to Contents Page

Before You Begin

Dell™ Inspiron™ 1100, 5100, and 5150 Service Manual

- Preparing to Work Inside the Computer
- **Recommended Tools**
- Computer Orientation
- Screw Identification

Preparing to Work Inside the Computer



CAUTION: Only a certified service technician should perform repairs on your computer. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions in the Owner's Manual that came with the computer.



CAUTION: To prevent static damage to components inside your computer, discharge static electricity from your body before you touch any of your computer's electronic components. You can do so by touching an unpainted metal surface.




CAUTION: Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket. Hold a component such as a microprocessor by its edges, not by its pins.

- **NOTICE:** To avoid damaging the computer, perform the following steps before you begin working inside the computer.
 - 1. Ensure that the work surface is flat and clean to prevent scratching the computer cover.
 - 2. Save any work in progress and exit all open programs.
 - 3. Turn off the computer and all attached devices.



NOTE: Ensure that the computer is off and not in a power management mode. If you cannot shut down the computer using the computer operating system, press and hold the power button for 4 seconds.

- 4. Disconnect the computer from the electrical outlet.
- 5. Close the display and turn the computer upside down on a flat work surface.
- NOTICE: To avoid damaging the system board, you must remove the main battery before you service the computer.
 - 6. Slide and hold the battery-bay latch release on the bottom of the computer, and then remove the battery from the bay.

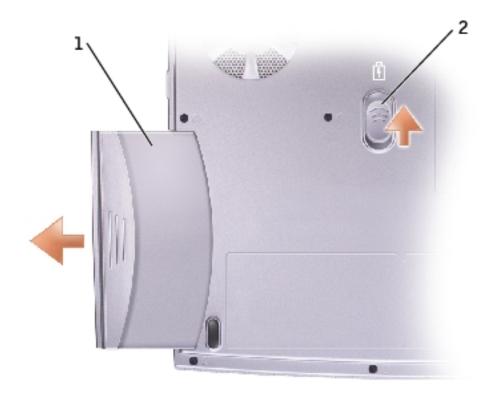

1	battery
2	battery-bay latch release

- 7. To avoid possible damage to the system board, wait 10 to 20 seconds and then disconnect any attached devices.
- 8. Disconnect all other external cables from the computer.
- 9. Remove any installed PC Cards from the PC Card slot.

Recommended Tools

The procedures in this manual require the following tools:

- #1 Phillips screwdriver
- ¼-inch flat-blade screwdriver
- Small plastic scribe
- Hex nut driver
- Flash BIOS update program CD

Computer Orientation