


HP LaserJet M5025/M5035 MFP Series printers

Service manual

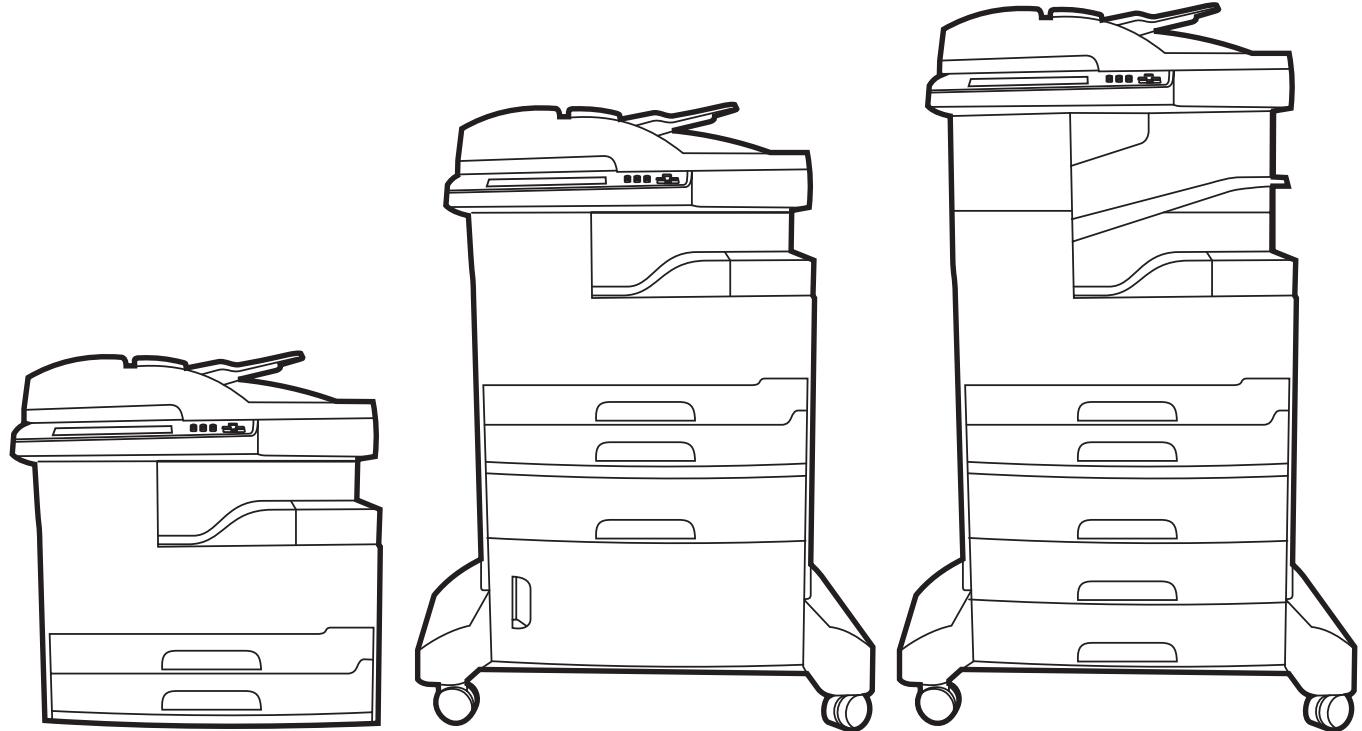

HP LaserJet M5025 and HP LaserJet M5035 Series MFP

Service Manual



Copyright and License

© 2006 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Part number: Q7829-90908

Edition 1, 10/2006

Trademark Credits

Adobe®, Acrobat®, and PostScript® are trademarks of Adobe Systems Incorporated.

Linux is a U.S. registered trademark of Linus Torvalds.

Microsoft®, Windows®, and Windows NT® are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

ENERGY STAR® and the ENERGY STAR logo® are U.S. registered marks of the United States Environmental Protection Agency.

Java™ is a U.S. registered trademark of Sun Microsystems, Inc.



Table of contents

1 Basics

Device comparison	2
Features comparison	3
Walkaround	5
Device parts	5
Interface ports	8
Device software	9
Supported operating systems	9
Supported printer drivers	9
Select the correct printer driver	10
Universal printer drivers	10
Driver Autoconfiguration	10
Update Now	11
HP Driver Preconfiguration	11
Priority for print settings	11
Open the printer drivers	12
Software for Macintosh computers	13
Remove software from Macintosh operating systems	13
Utilities	14
HP Web Jetadmin	14
Embedded Web server	14
Send Fax Driver	14
HP Easy Printer Care software	15
Supported operating systems	15
Supported browsers	15
Other components and utilities	15

2 Installation and configuration

Site requirements	18
Operating environment	20
I/O configuration	21
USB configuration	21
Network configuration	21
Configure TCP/IPv4 parameters	22
Set an IP address	22
Set the subnet mask	22
Set the default gateway	23
Configure TCP/IPv6 parameters	23
Disable network protocols (optional)	24

Disable IPX/SPX	24
Disable AppleTalk	24
Disable DLC/LLC	24
HP Jetdirect EIO print servers	25
Installing printer memory	26
To install printer memory	26
3 Manage and maintain the device	
Use the embedded Web server	30
Open the embedded Web server by using a network connection	30
Embedded Web server sections	31
Use HP Web Jetadmin software	33
Use the HP Printer Utility for Macintosh	34
Open the HP Printer Utility	34
HP Printer Utility features	35
Use the Administration menu	36
Navigate the Administration menu	36
Information menu	36
Default Job Options menu	37
Default Options for Originals	37
Image adjustment	39
Default Copy Options	40
Default Fax Options	41
Default E-mail Options	42
Default Send to Folder Options	43
Default Print Options	44
Time/Scheduling menu	45
Management menu	47
Initial Setup menu	48
Networking and I/O	48
Fax Setup	56
E-mail Setup	59
Send Setup menu	59
Device Behavior menu	60
Print Quality menu	64
Troubleshooting menu	67
Resets menu	76
Service menu	76
Use information pages	76
Configuring and verifying an IP address	79
Identifying the TCP/IP address	79
Use automatic discovery	79
Set up a dynamic host configuration protocol (DHCP)	79
Verifying the TCP/IP configuration	79
Changing an IP address	79
Change an IP address by using HP Web Jetadmin	79
Change an IP address by using the embedded Web server	80
Change an IP address by using the control panel	80
Remote firmware updates	81
Introduction	81

Print the configuration page	81
Printing a menu map	82
Downloading the new firmware from the HP Web site	82
Downloading the new firmware to the device	82
Troubleshooting firmware updates	82
Remote firmware update by using FTP through a browser	84
Remote firmware update by using FTP on a direct network connection	85
Remote firmware update through a local MS Windows port	86
Windows NT 4.0, Windows 2000, Windows XP, Windows XP or Windows 2003	86
Remote firmware update through a USB port	87
Remote firmware update through an MS Windows network	88
Remote firmware update for UNIX systems	89
Remote firmware update by using the LPR command	89
Remote firmware update through HP Web Jetadmin	90
Manage supplies	92
Supplies life	92
Approximate print-cartridge replacement intervals	92
Manage the print cartridge	92
Print-cartridge storage	92
Use genuine HP print cartridges	92
HP policy on non-HP print cartridges	92
Print-cartridge authentication	93
HP fraud hotline and Web site	93
Replace supplies and parts	94
Supply replacement guidelines	94
Change the print cartridge	94
Perform preventive maintenance	97
Preventive maintenance for the print engine	97
The ADF maintenance kit	97
Clean the device	98
Clean the exterior	98
Clean the scanner glass	98
Clean the scanner lid backing	99
Clean the ADF	100
Clean the print engine paper path	100

4 Theory of operation

MFP system overview	104
Print engine	106
Basic sequence of operation	106
Power-on sequence	107
Engine control system	107
DC controller PCA	108
High-voltage power-supply PCA	109
Low-voltage power-supply PCA	112
Video interface control	113
Laser/scanner system	113
Image-formation system	114
Electrostatic latent-image formation block	116

Step 1: primary charging	116
Step 2: laser-beam exposure	116
Development block	117
Step 3: developing	117
Transfer block	118
Step 4: image transfer	118
Step 5: separation from the drum	118
Fuser block	119
Step 6: fusing	119
Drum-cleaning block	119
Step 7: drum cleaning	119
Print cartridge	119
Memory tag	120
Pickup-and-feed-system	121
Cassette paper size and presence detection	124
Upper and lower cassette pickup mechanism	125
Multiple-feed prevention mechanism	127
Tray 1 (multipurpose tray) pickup mechanism	128
Skew-correction mechanism (registration)	129
Fuser/delivery block	130
Loop control	130
Jam detection	131
Duplexing unit	133
Duplexing reverse/feed operation	134
Duplexing feed operation	135
Duplexing horizontal registration function	136
Duplexing unit jam detection	137
1 x 500-sheet and 3 x 500-sheet high-capacity input feeder	138
Pickup/feed operation	140
HCI pickup mechanism	142
Lift-up operation	143
Multiple-feed prevention mechanism	145
HCI jam detection	147
Scanner component	148
ADF	150
Input tray	150
ADF simplex printing operation sequence	150
ADF duplex printing operation sequence	151
Multifeed operation	152
End of a scan job operation	153
Paper pick and separation operation	153
Deskew	154
Stapler/stacker component	155
Overview	155
Basic operation	156
Control system	157
Feed/stack system	160
Staple system	175

5 Removal and replacement

Removal and replacement strategy	178
Introduction	178
Required tools	179
Types of screws	179
Service approach	180
Before performing service	180
After performing service	180
Parts removal order	181
User-replaceable parts	182
Print cartridge	183
ADF separation pad and pickup and feed roller assemblies (removal and replacement)	184
Transfer roller	187
Tray 1 pickup roller (multipurpose paper pickup roller)	188
Tray 1 separation pad assembly (multipurpose pad assembly)	189
Tray 2 and Tray 3 pickup rollers (paper pickup roller assembly)	191
Tray 2 and Tray 3 separation pad assembly (separation block assembly)	193
Tray 4, Tray 5, and Tray 6 pickup and feed rollers (paper feed roller assembly)	194
Fuser	195
Duplexer	198
Formatter cover and cage	199
Hard drive	201
Fax PCA	202
ADF	203
ADF assembly	204
ADF input tray sensors	206
Separation floor assembly	208
Divertor	210
Jam cover	211
Hinge assemblies	213
Float assembly	214
White backing	217
Front end cover (cap)	219
Rear end cover (cap)	221
ADF PCA and wire harness	224
Input tray	226
Scanner	227
Control panel	228
Scanner controller board (SCB) and cover	230
Scanner assembly	232
Glass assembly and top cover	235
Optic assembly	240
To reinstall the drive belt and optic assembly	246
Page sensors	249
Transmission assemblies and slide rail	250
Stapler/stacker (HP LaserJet M5035xs only)	253
Stapler/stacker assembly	254
Stapler PCA	257
Rear cover	258
Left door	259

Output bin	260
Duplex cover	261
Left cover	262
Right and left rear covers	264
Front door and stapler unit cover	266
Output bin stay (support arm)	270
Rear inner cover	271
Stack cover	272
Stapler unit	273
Paper feed assembly (stapler)	275
Alignment and jogger guide assembly	276
Install the alignment and jogger guide assembly	280
Jogger guide unit	283
Front door interlock switch	286
Print engine (base unit)	288
Formatter cover	290
Face-down cover	291
Left door	292
Left upper cover	293
Rear cover	295
Front cover	296
Face-down side cover	300
Top inner cover	302
Front inner cover	304
Right door	306
Lower left cover	308
Left rear cover	311
Top cover	312
Right rear inner cover	313
Right rear cover	315
Left rear inner cover	316
Print cartridge door	318
Registration assembly	325
Fuser pressure release assembly	328
Fuser	329
Paper delivery assembly	330
Paper feed assembly (base unit)	332
Reinstall the paper feed assembly	333
Fuser fan	338
Fuser motor	339
Laser/scanner	340
Low-voltage power supply assembly	342
Interconnect PCA assembly	345
High-voltage power supply	347
Lifter drive assembly	354
DC controller PCA	357
Upper cassette pickup assembly	359
Lower cassette drive assembly	362
Main motor	363
Lower cassette pickup assembly	368

High capacity input feeder	371
Front door (single tray unit only)	372
Right door	373
Back cover	376
Motor(s) and PCA(s)	377
Paper pickup assemblies	378
Right side tray rail(s)	381
Left side tray rail(s)	382
Lifter driver assembly	384
6 Troubleshooting	
Introduction	389
Basic troubleshooting checklist	390
Factors that affect device performance	390
Troubleshooting flowchart	391
Power-on self diagnostic tests	391
Step 1: Does READY appear on the control-panel display?	391
Step 2: Can you print a configuration page?	392
Step 3: Does the device copy?	393
Step 4: Does the job print as expected?	393
Step 5: Does the printer select media from the correct trays?	394
Control-panel message types	396
Control-panel messages	397
Replacement-parts configuration	442
Formatter and dc controller	442
Formatter (new)	442
DC controller (new or previously installed in another printer)	442
Guidelines for using paper	443
Supported media weights and sizes	444
Printing internal information pages	447
Jam locations	448
General paper-path and jam troubleshooting	449
Paper-path checklist	449
Jams in Tray 1	450
Jams in Tray 2, or Tray 3	450
Jams in the optional high capacity input feeder	451
Common causes of repeating jams	452
Solve general repeated jams	457
Jam recovery	458
Clear jams	459
Clear jams from the automatic document feeder (ADF)	459
Clear jams from the stapler/stacker	461
Clear jams from the output path	463
Clear jams from the optional duplexer	464
Clear jams from the print-cartridge area	466
Clear jams from the input-tray areas	468
Clear jams from the Tray 1 input area	468
Clear jams from the Tray 2 and Tray 3 input area	468
Clear jams from the Tray 4/5/6 input areas	470
Clear staple jams	472

Solving image-quality problems	475
Solve print-quality problems	475
Solve copy-quality problems	475
Print-quality problems associated with media	475
Print-quality problems associated with the environment	476
Print-quality problems associated with jams	476
Image defect examples	476
Light print (partial page)	478
Light print (entire page)	479
Specks	480
Dropouts	481
Lines	483
Gray background	483
Toner smear	485
Loose toner	485
Repeating defects	487
Repeating image	487
Misformed characters	488
Page skew	489
Curl or wave	490
Wrinkles or creases	490
White lines	491
Tire tracks	491
White spots on black	492
Scattered lines	492
Blurred print	493
Random image repetition	493
Solve copy-quality problems	494
ADF image-quality problems	494
Blank page (ADF)	494
Page skew (ADF)	495
Horizontal lines (ADF)	495
Image shifted (ADF)	495
Unexpected Image (ADF)	496
Flatbed glass image-quality problems	496
Poor uniformity (flatbed)	496
Poor uniformity gradual (flatbed)	496
Lamp inverter failure (flatbed)	496
Streaks on page (flatbed)	497
Unexpected results (flatbed)	497
Solve copy problems	497
Media-handling problems	497
Performance problems	499
Troubleshooting communication interfaces	500
Check communications	500
Troubleshooting the EIO	500
Jetdirect page	500
Boot key sequences	502
Low-level boot key sequences	503
Mid-level boot key sequences	504

High-level boot key sequences	504
Control-panel boot sequence calibration	505
Engine test (formatter removed)	505
Service menu	507
Accessing the service menu	507
Service ID	509
Restoring the service ID	510
Convert the service ID to an actual date	510
Troubleshooting menu	511
Accessing the troubleshooting menu	511
Calibrate the scanner	515
Use the control panel	516
Control-panel layout	516
Home screen	517
Buttons on the touchscreen	518
Control-panel help system	518
Solve fax problems	519
Solve sending problems	519
Solve receiving problems	520
Solve e-mail problems	522
Validate the SMTP gateway address	522
Validate the LDAP gateway address	522
Diagrams	523
ADF	523
Sensors (ADF)	523
Wiring diagram (ADF)	524
Scanner	525
Components (scanner)	525
Wiring diagram (scanner)	526
Stapler/stacker	527
External panels and covers (stapler/stacker)	527
Sensors (stapler/stacker)	528
PCA (stapler/stacker)	529
Wiring diagram (stapler/stacker)	530
Engine (base unit)	531
Engine (base unit)	531
Interface connections (engine)	532
External panels and covers (engine)	533
Major components (engine)	535
Motors and fans (engine)	536
PCAs (engine)	537
Sensors and switches (engine)	538
DC controller PCA connectors (engine)	539
DC controller input/output signals (engine)	541
Wiring diagrams (engine)	546
Timing diagram (engine)	548
High capacity input feeder	549
External covers and panels (HCI)	549
Major components (HCI)	550
Motor(s) and PCA(s) (HCI)	551

Sensors (HCl)	552
Wiring diagrams (HCl)	553
Repetitive defect ruler	554
Interlocks and linkages	555
Print cartridge and MFP contacts	563
Known issues	565
Control-panel ESD disruption	565
Clearing a jam from the right (print cartridge) side	565
Loading Tray 2/3/4/5 with letter or A4 media	566
The stapler/stacker only staples letter and A4 media	566
Formatter cage does not properly seat	566
RFU with a SCB firmware upgrade	566
RFU with a DC controller firmware update	566
EIO device does not properly seat	566
Print cartridge cannot be removed	566
False left door open error message	567
Dark or flickering control-panel display	567
Fuser edge overheat slowdown	567

7 Parts and diagrams

Parts	571
How to use the parts lists and diagrams	572
Types of screws	572
Related documentation and software	573
Accessories, supplies, and whole unit components	573
Automatic document feeder (whole unit)	582
Front end cover (ADF)	584
Hinges (ADF)	586
Base assembly (ADF)	588
Backbone assembly (ADF)	590
Jam Cover (ADF)	594
Pickup roller assembly (ADF)	596
Separation pad assembly (ADF)	598
Separation floor assembly (ADF)	600
Scanner assembly base	602
Carriage assembly (scanner; optical assembly)	604
Scanner top assembly	606
Scanner controller board (SCB) assembly	608
Scanner lid sensor assembly	610
Scanner transmission drive assembly	612
Stapler/stacker assembly main body	614
Paper feed assembly (stapler/stacker)	618
Alignment and jogger assembly (stapler/stacker)	620
Stapler assembly (stapler/stacker)	624
Stapler/stacker PCA	626
Print engine external covers and panels	628
Cartridge door assembly (print engine)	632
Internal components (print engine 1 of 3)	636
Internal components (print engine; 2 of 3)	640
Internal components (print engine; 3 of 3)	644

Paper delivery assembly (print engine)	648
Lifter drive assembly (print engine)	652
Fuser drive assembly (print engine)	654
Lower drive assembly (print engine)	656
Upper cassette (print engine)	658
Lower cassette (print engine)	662
Upper cassette pickup assembly (print engine)	666
Lower cassette pickup assembly (print engine)	670
Registration assembly (print engine)	674
Paper feed assembly (print engine)	676
PCA assemblies (print engine)	678
Fuser (print engine)	680
Fuser pressure release assembly (print engine)	684
High capacity input (HCI) 1X500 feeder main body	686
High capacity input (HCI) 3X500 feeder main body	690
Lifter drive assembly (HCI)	694
Cassette (HCI)	696
Paper pickup assembly (HCI)	700
HCI PCA assemblies	704
Alphabetical parts list	706
Numerical parts list	764

Appendix A Specifications

Physical specifications	824
Electrical specifications	825
Acoustic emissions	826
Operating environment	826

Appendix B Service and support

Hewlett-Packard limited warranty statement	827
Customer self repair warranty service	828
Print cartridge limited warranty statement	829
HP Customer Care	830
Online Services	830
Telephone support	830
Software utilities, drivers, and electronic information	830
HP direct ordering for accessories or supplies	830
HP service information	830
HP service agreements	830
HP Easy Printer Care software	831
HP support and information for Macintosh computers	831
HP maintenance agreements	832
On-site service agreements	832
Next-day on-site service	832
Weekly (volume) on-site service	832
Repacking the device	832
Extended warranty	833

Appendix C Regulatory information

FCC regulations	836
Environmental product stewardship program	837
Protecting the environment	837
Ozone production	837
Power consumption	837
Toner consumption	837
Paper use	837
Plastics	837
HP LaserJet print supplies	838
HP print supplies returns and recycling program information	838
Paper	838
Material restrictions	839
Disposal of waste equipment by users in private households in the European Union	839
Material Safety Data Sheet (MSDS)	840
For more information	840
Telecom statement	841
Declaration of conformity	842
Safety statements	843
Laser safety	843
Canadian DOC regulations	843
VCCI statement (Japan)	843
EMI statement (Korea)	843
EMI statement (Taiwan)	843
Laser statement for Finland	843
Index	845

List of tables

Table 3-1	Information menu	36
Table 3-2	Default Options for Originals menu	38
Table 3-3	Image adjustment	39
Table 3-4	Default Copy Options menu	40
Table 3-5	Fax Send menu	41
Table 3-6	Fax Receive menu	41
Table 3-7	Default Print Options menu	44
Table 3-8	Time/Scheduling menu	45
Table 3-9	Management menu	47
Table 3-10	Networking and I/O	48
Table 3-11	Jetdirect menus	48
Table 3-12	Fax Setup menu	56
Table 3-13	E-mail Setup menu	59
Table 3-14	Send Setup menu	59
Table 3-15	Device Behavior menu	60
Table 3-16	Print Quality menu	64
Table 3-17	Troubleshooting menu	67
Table 3-18	Print/stop test time values (simplex print jobs)	73
Table 3-19	Print/stop test time values (duplex print jobs)	74
Table 3-20	Resets menu	76
Table 3-21	Troubleshooting a firmware update	83
Table 3-22	Troubleshooting a failed firmware update	83
Table 3-23	Update messages	83
Table 4-1	DC controller connections	104
Table 4-2	Scanner controller board (SCB) connections	105
Table 4-3	Sequence of operation (engine)	106
Table 4-4	Duplexing unit jam detection	137
Table 4-5	HCI paper pickup/feed operation	140
Table 4-6	Motor control circuit	160
Table 6-1	Control-panel LED cycles	391
Table 6-2	Control-panel messages	397
Table 6-3	Tray 1 specifications	444
Table 6-4	Tray 2 specifications	444
Table 6-5	Tray 3 specifications	444
Table 6-6	Optional trays 4, 5, and 6 specifications	445
Table 6-7	Specifications for automatic 2-sided printing	445
Table 6-8	Specifications for automatic stapling and stacking	445
Table 6-9	Specifications for the automatic document feeder (ADF)	446
Table 6-10	Causes for jams in Tray 1	450

Table 6-11	Causes for jams in Tray 2, or Tray 3	450
Table 6-12	Causes for jams in the optional HCI feeder	451
Table 6-13	General jam causes	452
Table 6-14	ADF jams	452
Table 6-15	Tray 1 jams	453
Table 6-16	Tray 2 and Tray 3 jams	453
Table 6-17	Transfer and feed jams	454
Table 6-18	Fuser and delivery jams	454
Table 6-19	HCI feeder jams (Tray 4/5/6 jams)	454
Table 6-20	Duplexer jams	455
Table 6-21	Stapler/stacker jams	455
Table 6-22	Image defect examples	476
Table 6-23	Image defect examples (ADF)	477
Table 6-24	Sensors (ADF)	523
Table 6-25	Components (scanner)	525
Table 6-26	External covers and panels (stapler/stacker)	527
Table 6-27	PCA (stapler/stacker)	529
Table 6-28	Engine (base unit)	531
Table 6-29	Interface connections (engine)	532
Table 6-30	External panels and covers (engine)	533
Table 6-31	Major components (engine)	535
Table 6-32	Motors and fans (engine)	536
Table 6-33	PCAs (engine)	537
Table 6-34	Sensors and switches (engine)	538
Table 6-35	Sensors and switches (engine; duplexer)	539
Table 6-36	Engine dc controller PCA (engine)	539
Table 6-37	External covers and panels (HCI)	549
Table 6-38	Major components (HCI)	550
Table 6-39	Motor(s) and PCA(s) (HCI)	551
Table 6-40	Sensors (HCI)	552
Table 6-41	Interlocks and linkages	555
Table 7-1	Technical support Web sites	573
Table 7-2	Accessories and supplies	573
Table 7-3	ADF	583
Table 7-4	Front end cover (ADF)	585
Table 7-5	Hinges	587
Table 7-6	Base assembly (ADF)	589
Table 7-7	Backbone assembly (ADF)	591
Table 7-8	Jam cover (ADF)	595
Table 7-9	Pickup roller assembly (ADF)	597
Table 7-10	Separation pad assembly (ADF)	599
Table 7-11	Separation floor assembly (ADF)	601
Table 7-12	Scanner assembly base	603
Table 7-13	Carriage assembly (scanner; optical assembly)	605
Table 7-14	Scanner top assembly	607
Table 7-15	Scanner controller board (SCB) assembly	609
Table 7-16	Scanner lid sensor assembly	611
Table 7-17	Scanner transmission drive assembly	613
Table 7-18	Main body (stapler/stacker)	615
Table 7-19	Paper feed assembly (stapler/stacker)	619

Table 7-20	Alignment and jogger assembly (stapler/stacker)	621
Table 7-21	Stapler assembly (stapler/stacker)	625
Table 7-22	Stapler/stacker PCA assembly	627
Table 7-23	External panels and covers (print engine)	629
Table 7-24	Cartridge door assembly (print engine)	633
Table 7-25	Internal components (1 of 3) (print engine)	637
Table 7-26	Internal components (2 of 3) (print engine)	641
Table 7-27	Internal components (3 of 3) (print engine)	645
Table 7-28	Paper delivery assembly (print engine)	649
Table 7-29	Lifter drive assembly (print engine)	653
Table 7-30	Fuser drive assembly (print engine)	655
Table 7-31	Lower drive assembly (print engine)	657
Table 7-32	Upper cassette (print engine)	659
Table 7-33	Lower cassette (print engine)	663
Table 7-34	Upper cassette pickup assembly (print engine)	667
Table 7-35	Lower cassette pickup assembly (print engine)	671
Table 7-36	Registration assembly (print engine)	675
Table 7-37	Paper feed assembly (print engine)	677
Table 7-38	PCA assemblies	679
Table 7-39	Fuser (print engine)	681
Table 7-40	Fuser pressure release assembly (print engine)	685
Table 7-41	1X500 HCI main body	687
Table 7-42	3X500 HCI main body	691
Table 7-43	Lifter drive assembly (HCI)	695
Table 7-44	Cassette (HCI)	697
Table 7-45	Paper pickup assembly (HCI)	701
Table 7-46	PCA assemblies	705
Table 7-47	Alphabetical parts list	706
Table 7-48	Numerical parts list	764
Table A-1	Dimensions	824
Table A-2	Dimensions with all doors and trays fully opened	824
Table A-3	Power requirements	825
Table A-4	Power consumption (average, in watts)	825
Table A-5	Sound power and pressure level,	826
Table A-6	Necessary conditions	826

List of figures

Figure 1-1	HP LaserJet M5025 MFP and HP LaserJet M5035 MFP	5
Figure 1-2	HP LaserJet M5035X MFP	6
Figure 1-3	HP LaserJet M5035XS MFP	7
Figure 2-1	MFP deminsions (1 of 3)	18
Figure 2-2	MFP deminsions (2 of 3)	18
Figure 2-3	MFP deminsions (3 of 3)	19
Figure 2-4	USB connection	21
Figure 4-1	MFP system block diagram	104
Figure 4-2	Device function block diagram	106
Figure 4-3	Engine control system	107
Figure 4-4	DC controller PCA	108
Figure 4-5	High-voltage power-supply PCA block diagram	109
Figure 4-6	Fuser unit	110
Figure 4-7	Fuser control circuit	111
Figure 4-8	Low-voltage power-supply PCA block diagram	112
Figure 4-9	Video interface control signal flow	113
Figure 4-10	Laser/scanner system	114
Figure 4-11	Image-formation system	115
Figure 4-12	Image-formation process	116
Figure 4-13	Primary charging	116
Figure 4-14	Laser-beam exposure	117
Figure 4-15	Image transfer	118
Figure 4-16	Separation from the drum	118
Figure 4-17	Fusing	119
Figure 4-18	Print cartridge (placeholder for 2–4–8)	120
Figure 4-19	Pickup-and-feed-system	122
Figure 4-20	Pickup/feed system blocks	123
Figure 4-21	Paper size and cassette presence detection	124
Figure 4-22	Upper and lower cassette pickup mechanism	125
Figure 4-23	Upper cassette lifting operation	126
Figure 4-24	Multiple feed prevention mechanism	127
Figure 4-25	Skew-correction mechanism	129
Figure 4-26	Loop control mechanism	130
Figure 4-27	Duplexing unit paper path	133
Figure 4-28	Signal flow for the duplexing driver PCA	133
Figure 4-29	Duplexing reverse/feed operation	134
Figure 4-30	Horizontal registration function	136
Figure 4-31	HCI paper path	138
Figure 4-32	Signal flow of the HCI driver	139

Figure 4-33	HCI paper pickup/feed operation	140
Figure 4-34	HCI pickup mechanism	142
Figure 4-35	Lift-up operation	144
Figure 4-36	Multiple-feed prevention mechanism	146
Figure 4-37	ADF operation	150
Figure 4-38	Simplex scanning document path	151
Figure 4-39	Duplex scanning document path	152
Figure 4-40	ADF paper pick and separation	154
Figure 4-41	Stapler/stacker	155
Figure 4-42	Stapler/stacker operation	156
Figure 4-43	Power ON sequence	157
Figure 4-44	Control system	158
Figure 4-45	Staple stacker driver PCA	159
Figure 4-46	Feed/stack system	161
Figure 4-47	Staple mode (1 of 7)	162
Figure 4-48	Staple mode (2 of 7)	163
Figure 4-49	Staple mode (3 of 7)	163
Figure 4-50	Staple mode (4 of 7)	164
Figure 4-51	Staple mode (5 of 7)	164
Figure 4-52	Staple mode (6 of 7)	165
Figure 4-53	Staple mode (7 of 7)	165
Figure 4-54	Stacking roller separation control	166
Figure 4-55	Stacking roller separation control process (1 of 2)	167
Figure 4-56	Stacking roller separation control process (2 of 2)	167
Figure 4-57	Stacking roller separation detection	168
Figure 4-58	Paper pile alignment control	168
Figure 4-59	Paper pile alignment control process (1 of 2)	169
Figure 4-60	Paper pile alignment control process (2 of 2)	169
Figure 4-61	Jogger control	170
Figure 4-62	Jogger control process (1 of 4)	170
Figure 4-63	Jogger control process (2 of 4)	170
Figure 4-64	Jogger control process (3 of 4)	171
Figure 4-65	Jogger control process (4 of 4)	171
Figure 4-66	Jogger position control	172
Figure 4-67	Stamping control	173
Figure 4-68	Staple system operation	175
Figure 5-1	Screwdrivers	179
Figure 5-2	Remove the print cartridge (1 of 2)	183
Figure 5-3	Remove the print cartridge (2 of 2)	183
Figure 5-4	Remove the ADF separation pad and pickup and feed roller assemblies (1 of 5)	184
Figure 5-5	Remove the ADF separation pad and pickup and feed roller assemblies (2 of 5)	184
Figure 5-6	Remove the ADF separation pad and pickup and feed roller assemblies (3 of 5)	185
Figure 5-7	Remove the ADF separation pad and pickup and feed roller assemblies (4 of 5)	185
Figure 5-8	Remove the ADF separation pad and pickup and feed roller assemblies (5 of 5)	186
Figure 5-9	Remove the transfer roller (1 of 2)	187
Figure 5-10	Remove the transfer roller (2 of 2)	187
Figure 5-11	Remove the Tray 1 pickup roller (1 of 2)	188
Figure 5-12	Remove the Tray 1 pickup roller (2 of 2)	188
Figure 5-13	Remove the Tray 1 separation pad assembly (1 of 3; front retainer shown)	189
Figure 5-14	Remove the Tray 1 separation pad assembly (2 of 3)	189

Figure 5-15	Remove the Tray 1 separation pad assembly (3 of 3)	190
Figure 5-16	Remove the Tray 2 and Tray 3 pickup rollers (1 of 4)	191
Figure 5-17	Remove the Tray 2 and Tray 3 pickup rollers (2 of 4)	191
Figure 5-18	Remove the Tray 2 and Tray 3 pickup rollers (3 of 4)	192
Figure 5-19	Remove the Tray 2 and Tray 3 pickup rollers (4 of 4)	192
Figure 5-20	Remove the Tray 2 and Tray 3 separation pad assembly (1 of 2)	193
Figure 5-21	Remove the Tray 2 and Tray 3 separation pad assembly (2 of 2)	193
Figure 5-22	Remove the Tray 4, Tray 5, and Tray 6 pickup and feed rollers	194
Figure 5-23	Remove the fuser (1 of 6)	195
Figure 5-24	Remove the fuser (2 of 6)	195
Figure 5-25	Remove the fuser (3 of 6)	196
Figure 5-26	Remove the fuser (4 of 6)	196
Figure 5-27	Remove the fuser (5 of 6)	197
Figure 5-28	Remove the fuser (6 of 6)	197
Figure 5-29	Remove the duplexer	198
Figure 5-30	Remove the formatter cover and cage (1 of 3)	199
Figure 5-31	Remove the formatter cover and cage (2 of 3)	199
Figure 5-32	Remove the formatter cover and cage (3 of 3)	200
Figure 5-33	Reinstall the formatter cage	200
Figure 5-34	Remove the hard drive (1 of 2)	201
Figure 5-35	Remove the hard drive (2 of 2)	201
Figure 5-36	Remove the Fax PCA (1 of 2)	202
Figure 5-37	Remove the Fax PCA (2 of 2)	202
Figure 5-38	Remove the ADF (1 of 4)	204
Figure 5-39	Remove the ADF (2 of 4)	204
Figure 5-40	Remove the ADF (3 of 4)	205
Figure 5-41	Remove the ADF (4 of 4)	205
Figure 5-42	Remove the ADF sensors (1 of 2)	206
Figure 5-43	Remove the ADF sensors (2 of 2)	207
Figure 5-44	Remove the ADF separation floor assembly (1 of 4)	208
Figure 5-45	Remove the ADF separation floor assembly (2 of 4)	208
Figure 5-46	Remove the ADF separation floor assembly (3 of 4)	209
Figure 5-47	Remove the ADF separation floor assembly (4 of 4)	209
Figure 5-48	Remove the ADF diverter (1 of 2)	210
Figure 5-49	Remove the ADF diverter (2 of 2)	210
Figure 5-50	Remove the ADF jam cover (1 of 3)	211
Figure 5-51	Remove the ADF jam cover (2 of 3)	211
Figure 5-52	Remove the ADF jam cover (3 of 3)	212
Figure 5-53	Remove the ADF hinges	213
Figure 5-54	Remove the ADF float assembly (1 of 5)	214
Figure 5-55	Remove the ADF float assembly (2 of 5)	214
Figure 5-56	Remove the ADF float assembly (3 of 5)	215
Figure 5-57	Remove the ADF float assembly (4 of 5)	215
Figure 5-58	Remove the ADF float assembly (5 of 5)	216
Figure 5-59	Remove the ADF white backing (1 of 4)	217
Figure 5-60	Remove the ADF white backing (2 of 4)	217
Figure 5-61	Remove the ADF white backing (3 of 4)	218
Figure 5-62	Remove the ADF white backing (4 of 4)	218
Figure 5-63	Remove the ADF front end cover (1 of 4)	219
Figure 5-64	Remove the ADF front end cover (2 of 4)	219

Figure 5-65	Remove the ADF front end cover (3 of 4)	220
Figure 5-66	Remove the ADF front end cover (4 of 4)	220
Figure 5-67	Remove the ADF rear end cover (1 of 5)	221
Figure 5-68	Remove the ADF rear end cover (2 of 5)	221
Figure 5-69	Remove the ADF rear end cover (3 of 5)	222
Figure 5-70	Remove the ADF rear end cover (4 of 5)	222
Figure 5-71	Remove the ADF rear end cover (5 of 5)	223
Figure 5-72	Reinstall the ADF rear end cover	223
Figure 5-73	Remove the ADF PCA and wire harness (1 of 3)	224
Figure 5-74	Remove the ADF PCA and wire harness (2 of 3)	224
Figure 5-75	Remove the ADF PCA and wire harness (3 of 3)	225
Figure 5-76	Remove the ADF input tray (1 of 2)	226
Figure 5-77	Remove the ADF input tray (2 of 2)	226
Figure 5-78	Remove the control panel (1 of 3)	228
Figure 5-79	Remove the control panel (2 of 3)	228
Figure 5-80	Remove the control panel (3 of 3)	229
Figure 5-81	Remove the SCB (1 of 4)	230
Figure 5-82	Remove the SCB (2 of 4)	230
Figure 5-83	Remove the SCB (3 of 4)	231
Figure 5-84	Remove the SCB (4 of 4)	231
Figure 5-85	Remove the scanner (1 of 4)	232
Figure 5-86	Remove the scanner (2 of 4)	233
Figure 5-87	Remove the scanner (3 of 4)	233
Figure 5-88	Remove the scanner (4 of 4)	234
Figure 5-89	Remove the scanner glass assembly and top cover (1 of 7)	235
Figure 5-90	Remove the scanner glass assembly and top cover (2 of 7)	236
Figure 5-91	Remove the scanner glass assembly and top cover (4 of 7)	236
Figure 5-92	Remove the scanner glass assembly and top cover (3 of 7)	237
Figure 5-93	Remove the scanner glass assembly and top cover (5 of 7)	237
Figure 5-94	Remove the scanner glass assembly and top cover (6 of 7)	238
Figure 5-95	Remove the scanner glass assembly and top cover (7 of 7)	239
Figure 5-96	Remove the scanner optic assembly (1 of 13)	240
Figure 5-97	Remove the scanner optic assembly (2 of 13)	240
Figure 5-98	Remove the scanner optic assembly (3 of 13)	241
Figure 5-99	Remove the scanner optic assembly (4 of 13)	241
Figure 5-100	Remove the scanner optic assembly (5 of 13)	242
Figure 5-101	Remove the scanner optic assembly (6 of 13)	242
Figure 5-102	Remove the scanner optic assembly (7 of 13)	243
Figure 5-103	Remove the scanner optic assembly (8 of 13)	243
Figure 5-104	Remove the scanner optic assembly (9 of 13)	244
Figure 5-105	Remove the scanner optic assembly (10 of 13)	244
Figure 5-106	Remove the scanner optic assembly (11 of 13)	245
Figure 5-107	Remove the scanner optic assembly (12 of 13)	245
Figure 5-108	Remove the scanner optic assembly (13 of 13)	246
Figure 5-109	Reinstall the optic drive belt (1 of 5)	246
Figure 5-110	Reinstall the optic drive belt (2 of 5)	247
Figure 5-111	Reinstall the optic drive belt (3 of 5)	247
Figure 5-112	Reinstall the optic drive belt (4 of 5)	248
Figure 5-113	Reinstall the optic drive belt (5 of 5)	248
Figure 5-114	Remove the scanner page sensors	249

Figure 5-115	Remove the scanner transmission assemblies and slide rail (1 of 5)	250
Figure 5-116	Remove the scanner transmission assemblies and slide rail (2 of 5)	251
Figure 5-117	Remove the scanner transmission assemblies and slide rail (3 of 5)	251
Figure 5-118	Remove the scanner transmission assemblies and slide rail (4 of 5)	252
Figure 5-119	Remove the scanner transmission assemblies and slide rail (5 of 5)	252
Figure 5-120	Remove the stapler assembly (1 of 5)	254
Figure 5-121	Remove the stapler assembly (2 of 5)	254
Figure 5-122	Remove the stapler assembly (3 of 5)	255
Figure 5-123	Remove the stapler assembly (4 of 5)	255
Figure 5-124	Remove the stapler assembly (5 of 5)	256
Figure 5-125	Remove the stapler PCA (1 of 2)	257
Figure 5-126	Remove the stapler PCA (2 of 2)	257
Figure 5-127	Remove the stapler rear cover	258
Figure 5-128	Remove the stapler left door	259
Figure 5-129	Remove the stapler output bin (1 of 2)	260
Figure 5-130	Remove the stapler output bin (2 of 2)	260
Figure 5-131	Remove the duplex cover	261
Figure 5-132	Install the duplex cover	261
Figure 5-133	Remove the stapler left cover (2 of 3)	262
Figure 5-134	Remove the stapler left cover (1 of 3)	262
Figure 5-135	Remove the stapler left cover (3 of 3)	263
Figure 5-136	Remove the stapler right and left rear covers (1 of 4)	264
Figure 5-137	Remove the stapler right and left rear covers (2 of 4)	264
Figure 5-138	Remove the stapler right and left rear covers (3 of 4)	265
Figure 5-139	Remove the stapler right and left rear covers (4 of 4)	265
Figure 5-140	Remove the stapler front door and stapler unit cover (1 of 7)	266
Figure 5-141	Remove the stapler front door and stapler unit cover (2 of 7)	266
Figure 5-142	Remove the stapler front door and stapler unit cover (3 of 7)	267
Figure 5-143	Remove the stapler front door and stapler unit cover (4 of 7)	267
Figure 5-144	Remove the stapler front door and stapler unit cover (5 of 7)	268
Figure 5-145	Remove the stapler front door and stapler unit cover (6 of 7)	268
Figure 5-146	Remove the stapler front door and stapler unit cover (7 of 7)	269
Figure 5-147	Remove the stapler output bin stay (support arm)	270
Figure 5-148	Remove the stapler rear inner cover	271
Figure 5-149	Remove the stapler stack cover	272
Figure 5-150	Remove the stapler unit (1 of 2)	273
Figure 5-151	Remove the stapler unit (2 of 2)	273
Figure 5-152	Reinstall the stapler unit	274
Figure 5-153	Remove the stapler paper feed assembly (1 of 3)	275
Figure 5-154	Remove the stapler paper feed assembly (2 of 3)	276
Figure 5-155	Remove the stapler paper feed assembly (3 of 3)	276
Figure 5-156	Remove the stapler alignment and jogger guide assembly (1 of 6)	277
Figure 5-157	Remove the stapler alignment and jogger guide assembly (2 of 6)	278
Figure 5-158	Remove the stapler alignment and jogger guide assembly (3 of 6)	278
Figure 5-159	Remove the stapler alignment and jogger guide assembly (4 of 6)	279
Figure 5-160	Remove the stapler alignment and jogger guide assembly (5 of 6)	279
Figure 5-161	Remove the stapler alignment and jogger guide assembly (6 of 6)	280
Figure 5-162	Install the stapler alignment and jogger guide assembly (1 of 5)	280
Figure 5-163	Install the stapler alignment and jogger guide assembly (2 of 5)	281
Figure 5-164	Install the stapler alignment and jogger guide assembly (3 of 5)	281

Figure 5-165	Install the stapler alignment and jogger guide assembly (4 of 5)	282
Figure 5-166	Install the stapler alignment and jogger guide assembly (5 of 5)	282
Figure 5-167	Remove the jogger guide unit (1 of 3)	283
Figure 5-168	Remove the jogger guide unit (2 of 3)	284
Figure 5-169	Remove the jogger guide unit (3 of 3)	284
Figure 5-170	Install the jogger guide unit (1 of 2)	285
Figure 5-171	Install the jogger guide unit (2 of 2)	285
Figure 5-172	Remove the front door interlock switch (1 of 3)	286
Figure 5-173	Remove the front door interlock switch (2 of 3)	287
Figure 5-174	Remove the front door interlock switch (3 of 3)	287
Figure 5-175	Remove the base unit formatter cover	290
Figure 5-176	Remove the base unit face-down cover (1 of 2)	291
Figure 5-177	Remove the base unit face-down cover (2 of 2)	291
Figure 5-178	Remove the base unit left door (1 of 2)	292
Figure 5-179	Remove the base unit left door (2 of 2)	292
Figure 5-180	Remove the base unit left upper cover (1 of 3)	293
Figure 5-181	Remove the base unit left upper cover (2 of 3)	293
Figure 5-182	Remove the base unit left upper cover (3 of 3)	294
Figure 5-183	Remove the base unit rear cover (1 of 2)	295
Figure 5-184	Remove the base unit rear cover (2 of 2)	295
Figure 5-185	Remove the base unit front cover (1 of 7)	296
Figure 5-186	Remove the base unit front cover (2 of 7)	296
Figure 5-187	Remove the base unit front cover (3 of 7)	297
Figure 5-188	Remove the base unit front cover (4 of 7)	297
Figure 5-189	Remove the base unit front cover (5 of 7)	298
Figure 5-190	Remove the base unit front cover (6 of 7)	298
Figure 5-191	Remove the base unit front cover (7 of 7)	299
Figure 5-192	Remove the base unit face-down side cover (1 of 2)	300
Figure 5-193	Remove the base unit face-down side cover (2 of 2)	301
Figure 5-194	Remove the base unit top inner cover (1 of 2)	302
Figure 5-195	Remove the base unit top inner cover (2 of 2)	303
Figure 5-196	Remove the base unit front inner cover (1 of 2)	304
Figure 5-197	Remove the base unit front inner cover (2 of 2)	305
Figure 5-198	Remove the base unit right door (1 of 2)	306
Figure 5-199	Remove the base unit right door (2 of 2)	307
Figure 5-200	Install the base unit right door	307
Figure 5-201	Identify the lower left cover locking tabs	308
Figure 5-202	Remove the base unit lower left cover (1 of 4)	309
Figure 5-203	Remove the base unit lower left cover (2 of 4)	309
Figure 5-204	Remove the base unit lower left cover (3 of 4)	310
Figure 5-205	Remove the base unit lower left cover (4 of 4)	310
Figure 5-206	Remove the base unit left rear cover (1 of 2)	311
Figure 5-207	Remove the base unit left rear cover (2 of 2)	311
Figure 5-208	Remove the base unit top cover	312
Figure 5-209	Remove the right rear inner cover (1 of 2)	313
Figure 5-210	Remove the right rear inner cover (2 of 2)	314
Figure 5-211	Remove the right rear cover	315
Figure 5-212	Remove the left rear inner cover (1 of 3)	316
Figure 5-213	Remove the left rear inner cover (2 of 3)	317
Figure 5-214	Remove the left rear inner cover (3 of 3)	317

Figure 5-215	Remove the print cartridge door (1 of 12)	318
Figure 5-216	Remove the print cartridge door (2 of 12)	319
Figure 5-217	Remove the print cartridge door (3 of 12)	319
Figure 5-218	Remove the print cartridge door (4 of 12)	320
Figure 5-219	Remove the print cartridge door (5 of 12)	320
Figure 5-220	Remove the print cartridge door (6 of 12)	321
Figure 5-221	Remove the print cartridge door (7 of 12)	321
Figure 5-222	Remove the print cartridge door (8 of 12)	322
Figure 5-223	Remove the print cartridge door (9 of 12)	322
Figure 5-224	Remove the print cartridge door (10 of 12)	323
Figure 5-225	Remove the print cartridge door (11 of 12)	323
Figure 5-226	Remove the print cartridge door (12 of 12)	324
Figure 5-227	Remove the registration assembly (1 of 5)	325
Figure 5-228	Remove the registration assembly (2 of 5)	325
Figure 5-229	Remove the registration assembly (3 of 5)	326
Figure 5-230	Remove the registration assembly (4 of 5)	326
Figure 5-231	Remove the fuser registration assembly (5 of 5)	327
Figure 5-232	Remove the fuser pressure release assembly	328
Figure 5-233	Remove the fuser	329
Figure 5-234	Remove the paper delivery assembly (1 of 2)	330
Figure 5-235	Remove the paper delivery assembly (2 of 2)	331
Figure 5-236	Remove the paper feed assembly (1 of 3)	332
Figure 5-237	Remove the paper feed assembly (2 of 3)	332
Figure 5-238	Remove the paper feed assembly (3 of 3)	333
Figure 5-239	Reinstall the paper feed assembly (1 of 8)	333
Figure 5-240	Reinstall the paper feed assembly (2 of 8)	334
Figure 5-241	Reinstall the paper feed assembly (3 of 8)	335
Figure 5-242	Reinstall the paper feed assembly (4 of 8)	335
Figure 5-243	Reinstall the paper feed assembly (5 of 8)	336
Figure 5-244	Reinstall the paper feed assembly (6 of 8)	336
Figure 5-245	Reinstall the paper feed assembly (7 of 8)	337
Figure 5-246	Reinstall the paper feed assembly (8 of 8)	337
Figure 5-247	Remove the fuser fan	338
Figure 5-248	Remove the fuser motor	339
Figure 5-249	Remove the laser/scanner (1 of 3)	340
Figure 5-250	Remove the laser/scanner (2 of 3)	341
Figure 5-251	Remove the laser/scanner (3 of 3)	341
Figure 5-252	Remove the low-voltage power supply assembly (1 of 4)	342
Figure 5-253	Remove the low-voltage power supply assembly (2 of 4)	343
Figure 5-254	Remove the low-voltage power supply assembly (3 of 4)	343
Figure 5-255	Remove the low-voltage power supply assembly (4 of 4)	344
Figure 5-256	Remove the interconnect PCA (1 of 3)	345
Figure 5-257	Remove the interconnect PCA (2 of 3)	346
Figure 5-258	Remove the interconnect PCA (3 of 3)	346
Figure 5-259	Remove the high-voltage power supply assembly (1 of 9)	347
Figure 5-260	Remove the high-voltage power supply assembly (2 of 9)	348
Figure 5-261	Remove the high-voltage power supply assembly (3 of 9)	348
Figure 5-262	Remove the high-voltage power supply assembly (4 of 9)	349
Figure 5-263	Remove the high-voltage power supply assembly (5 of 9)	349
Figure 5-264	Remove the high-voltage power supply assembly (6 of 9)	350

Figure 5-265	Remove the high-voltage power supply assembly (7 of 9)	350
Figure 5-266	Remove the high-voltage power supply assembly (8 of 9)	351
Figure 5-267	Remove the high-voltage power supply assembly (9 of 9)	352
Figure 5-268	Reinstall the high-voltage power supply assembly (1 of 3)	352
Figure 5-269	Reinstall the high-voltage power supply assembly (2 of 3)	353
Figure 5-270	Reinstall the high-voltage power supply assembly (3 of 3)	353
Figure 5-271	Remove the lifter driver assembly (1 of 4)	354
Figure 5-272	Remove the lifter driver assembly (2 of 4)	355
Figure 5-273	Remove the lifter driver assembly (3 of 4)	355
Figure 5-274	Remove the lifter driver assembly (4 of 4)	356
Figure 5-275	Remove the DC controller PCA (1 of 2)	357
Figure 5-276	Remove the DC controller PCA (2 of 2)	358
Figure 5-277	Remove the upper cassette pickup assembly (1 of 3)	359
Figure 5-278	Remove the upper cassette pickup assembly (2 of 3)	360
Figure 5-279	Remove the upper cassette pickup assembly (3 of 3)	360
Figure 5-280	Reinstall the upper cassette pickup assembly	361
Figure 5-281	Remove the lower cassette drive assembly	362
Figure 5-282	Remove the main motor (1 of 7)	363
Figure 5-283	Remove the main motor (2 of 7)	364
Figure 5-284	Remove the main motor (3 of 7)	364
Figure 5-285	Remove the main motor (4 of 7)	365
Figure 5-286	Remove the main motor (5 of 7)	365
Figure 5-287	Remove the main motor (6 of 7)	366
Figure 5-288	Remove the main motor (7 of 7)	366
Figure 5-289	Reinstall the print cartridge cam linkage (1 of 2)	367
Figure 5-290	Reinstall the print cartridge cam linkage (2 of 2)	367
Figure 5-291	Remove the lower cassette pickup assembly (1 of 5)	368
Figure 5-292	Remove the lower cassette pickup assembly (2 of 5)	369
Figure 5-293	Remove the lower cassette pickup assembly (3 of 5)	369
Figure 5-294	Remove the lower cassette pickup assembly (4 of 5)	370
Figure 5-295	Remove the lower cassette pickup assembly (5 of 5)	370
Figure 5-296	Remove the HCI front door (single tray unit only) (1 of 2)	372
Figure 5-297	Remove the HCI front door (single tray unit only) (2 of 2)	372
Figure 5-298	Remove the HCI right door (1 of 5)	373
Figure 5-299	Remove the HCI right door (2 of 5)	373
Figure 5-300	Remove the HCI right door (3 of 5)	374
Figure 5-301	Remove the HCI right door (4 of 5)	374
Figure 5-302	Remove the HCI right door (5 of 5)	375
Figure 5-303	Remove the HCI back cover (1 of 2)	376
Figure 5-304	Remove the HCI back cover (2 of 2)	376
Figure 5-305	Remove the HCI motor(s) and PCA(s) (1 of 2)	377
Figure 5-306	Remove the HCI motor(s) and PCA(s) (2 of 2)	377
Figure 5-307	Remove the HCI paper pickup assembly (1 of 6)	378
Figure 5-308	Remove the HCI paper pickup assembly (2 of 6)	378
Figure 5-309	Remove the HCI paper pickup assembly (3 of 6)	379
Figure 5-310	Remove the HCI paper pickup assembly (4 of 6; middle paper pickup assembly shown)	379
Figure 5-311	Remove the HCI paper pickup assembly (5 of 6)	380
Figure 5-312	Remove the HCI paper pickup assembly (6 of 6)	380
Figure 5-313	Remove the HCI right side tray rail(s) (1 of 2)	381
Figure 5-314	Remove the HCI right side tray rail(s) (2 of 2)	381

Figure 5-315	Remove the HCI left side tray rail(s) (1 of 3)	382
Figure 5-316	Remove the HCI left side tray rail(s) (2 of 3)	382
Figure 5-317	Remove the HCI left side tray rail(s) (3 of 3)	383
Figure 5-318	Remove the HCI lifter driver assembly (1 of 2)	384
Figure 5-319	Remove the HCI lifter driver assembly (2 of 2)	384
Figure 5-320	Reinstall the HCI lifter driver assembly	385
Figure 6-1	Engine test button location	506
Figure 6-2	Sensors (ADF)	523
Figure 6-3	Wiring diagram (ADF)	524
Figure 6-4	Components (scanner)	525
Figure 6-5	Wiring diagram (scanner)	526
Figure 6-6	External covers and panels (stapler/stacker)	527
Figure 6-7	Sensors (stapler/stacker)	528
Figure 6-8	PCA (stapler/stacker)	529
Figure 6-9	Wiring diagram (stapler/stacker)	530
Figure 6-10	Engine (base unit)	531
Figure 6-11	Engine interface connections (engine)	532
Figure 6-12	Engine external panels and covers (engine)	533
Figure 6-13	Engine major components (engine)	535
Figure 6-14	Engine motors and fans (engine)	536
Figure 6-15	Engine PCAs (engine)	537
Figure 6-16	Sensors and switches (engine)	538
Figure 6-17	Sensors and switches (engine; duplexer)	539
Figure 6-18	Engine dc controller PCA (engine)	539
Figure 6-19	DC controller input/output signals (1 of 5) (engine)	541
Figure 6-20	DC controller input/output signals (2 of 5) (engine)	542
Figure 6-21	DC controller input/output signals (3 of 5) (engine)	543
Figure 6-22	DC controller input/output signals (4 of 5) (engine)	544
Figure 6-23	DC controller input/output signals (5 of 5) (engine)	545
Figure 6-24	Wiring diagram, engine (1 of 2) (engine)	546
Figure 6-25	Wiring diagram, engine (2 of 2) (engine)	547
Figure 6-26	Timing diagram (engine)	548
Figure 6-27	External covers and panels (HCI)	549
Figure 6-28	Major components (HCI)	550
Figure 6-29	Motor(s) and PCA(s) (HCI)	551
Figure 6-30	Sensors (HCI)	552
Figure 6-31	Wiring diagram (HCI; 1 X 500-sheet feeder)	553
Figure 6-32	Wiring diagram (HCI; 3 x 500-sheet feeder)	554
Figure 6-33	Repetitive defect ruler	555
Figure 6-34	Print cartridge and MFP contacts	564
Figure 7-1	ADF	582
Figure 7-2	Front end cover (ADF)	584
Figure 7-3	Hinges	586
Figure 7-4	Base assembly (ADF)	588
Figure 7-5	Backbone assembly (ADF)	590
Figure 7-6	Jam cover (ADF)	594
Figure 7-7	Pickup roller assembly (ADF)	596
Figure 7-8	Separation pad assembly (ADF)	598
Figure 7-9	Separation floor assembly (ADF)	600
Figure 7-10	Scanner assembly base	602

Figure 7-11	Carriage assembly (scanner; optical assembly)	604
Figure 7-12	Scanner top assembly	606
Figure 7-13	Scanner controller board (SCB) assembly	608
Figure 7-14	Scanner lid sensor assembly	610
Figure 7-15	Scanner transmission drive assembly	612
Figure 7-16	Main body (stapler/stacker)	614
Figure 7-17	Paper feed assembly (stapler/stacker)	618
Figure 7-18	Alignment/jogger assembly (stapler/stacker)	620
Figure 7-19	Stapler assembly (stapler/stacker)	624
Figure 7-20	Stapler/stacker PCA assembly	626
Figure 7-21	External panel and covers (print engine)	628
Figure 7-22	Cartridge door assembly (print engine)	632
Figure 7-23	Internal components (1 of 3) (print engine)	636
Figure 7-24	Internal components (2 of 3) (print engine)	640
Figure 7-25	Internal components (3 of 3) (print engine)	644
Figure 7-26	Paper delivery assembly (print engine)	648
Figure 7-27	Lifter drive assembly (print engine)	652
Figure 7-28	Fuser drive assembly (print engine)	654
Figure 7-29	Lower drive assembly (print engine)	656
Figure 7-30	Upper cassette (print engine)	658
Figure 7-31	Lower cassette (print engine)	662
Figure 7-32	Upper cassette pickup assembly (print engine)	666
Figure 7-33	Lower cassette pickup assembly (print engine)	670
Figure 7-34	Registration assembly (print engine)	674
Figure 7-35	Paper feed assembly (print engine)	676
Figure 7-36	PCA assemblies (print engine)	678
Figure 7-37	Fuser (print engine)	680
Figure 7-38	Fuser pressure release assembly (print engine)	684
Figure 7-39	1X500 HCI main body	686
Figure 7-40	3X500 HCI main body	690
Figure 7-41	Lifter drive assembly (HCI)	694
Figure 7-42	Cassette (HCI)	696
Figure 7-43	Paper pickup assembly (HCI)	700
Figure 7-44	PCA assemblies	704